



KALCO.
Handcrafted Since 1980

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 870
PONDEROSA OVAL WALL MIRROR

I M A G E



If you have any questions or problems assembling your fixture please call us for assistance.

Customer Service: (702) 361-4345 or (800) 525-2655
customer.services@kalco.com

WARNING! TO REDUCE THE RISK OF FIRE OR INJURY PLEASE TAKE PRECAUTION AND FOLLOW THE STEPS BELOW.

1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

Si vous avez des questions ou des problèmes assemblage de votre dispositif s'il vous plait appel pour l'assistance.

Customer Service: (702) 361-4345 or (800) 525-2655
customer.services@kalco.com

AVERTISSEMENT! POUR RÉDUIRE LES RISQUES D'INCENDIE OU DE BLESSURES S'IL VOUS PLAÎT PRENDRE DES PRÉCAUTIONS ET SUIVEZ LES ÉTAPES CI-DESSOUS.

1. Si vous n'êtes pas familier avec le câblage électrique, appelez un électricien qualifié pour installer cet appareil. Plus d'une personne peut être nécessaire d'installer appareil, assurez vous que vous disposez de l'aide assez qualifié.
2. Coupez l'alimentation au circuit de l'appareil sur le tableau de service. Utiliser un détecteur de tension pour vérifier que l'alimentation est coupée
3. NE PAS installer l'ampoule qui excède la puissance maximale indiquée sur l'étiquette du socket.




KALCO.
Handcrafted Since 1980

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 870
PONDEROSA OVAL WALL MIRROR

FRAME/COMPONENTS ASSEMBLY

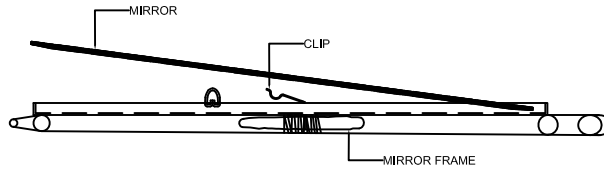

STEP 1: (Insert mirror into the frame)

There are 4pcs clips at the back of the frame,remove the 2pcs clips at the side. Slide the mirror into the frame as shown. Place the mirror cardboard behind the mirror and back out and bend the clips in,so they will be snug. Back the 2pcs clips at the side make it sure they are also snug against the back.


Note: Use carton or other non-abrasive material to lay the frame on, to protect the finish.

STEP 2: Use the wire steel provided with your mirror. At each side of the frame there are 2pcs clips to attach the steel wire. Loop the wire and twisting it back on itself atleast 4x. Hang the mirror approximately 3" onto the screw.

WALL MOUNTING

STEP 3. For dry or plaster walls use some type of toggle or expandable screw that will support the weight of the mirror. Determine desire height and fasten the type of hanger to the wall.

You can also mount the mirror horizontally. Position the mirror as desired and follow same procedure.

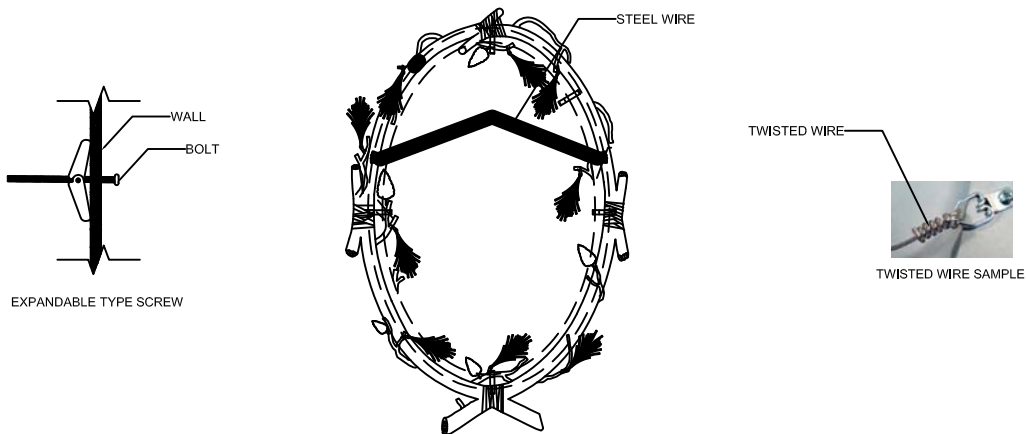





KALCO
Handcrafted Since 1980

ASSEMBLY & INSTALLATION INSTRUCTIONS

MODEL: 870
PONDEROSA OVAL WALL MIRROR

PARTS LIST

IMAGE	PARTS NAME	QTY
	Mirror Cable	4 FT
	Glass Mirror	1 PC

FOR LIGHTING MAINTENANCE:

- **Regular cleaning of fixture with proper and gentle care using a soft duster, soft lint-free or damp cloth is recommended.**
- **Refrain from using harsh cleaning liquids that may cause chemical reaction on the hand painted finishes.**
- **Always refer to the Assembly Instruction before removing any components.**
- **HANDLE WITH CARE.**